



All heavy goods vehicles with a Gross Vehicle Weight of more than 3.5 tonnes (since 1 April 2016), as well as all semi-trailer tractors of the N1 category with a body code BC regardless of their weight (since 1 January 2018), must pay a kilometre charge in Belgium. This regulation applies on motorways and several regional and municipal roads. In order to comply with Belgian toll regulations, you need to register your vehicle on the Satellic Road User Portal (RUP) or at a Service Point. This document informs you about the documents you will need for your registration.

You will find the following information:

- The data you have to register 2
- Where to find the data 5
- The documents that Satellic accepts as proof 6

Introduction

When registering a vehicle on the Satellic Road User Portal (RUP) or at a Service Point you will be asked to:

- a. Provide certain data about your vehicle
- b. Upload or scan all of the relevant vehicle documents

This document displays the vehicle documents that Satellic accepts as proof for the vehicle data that you should provide.

You need to register:

Vehicle data

<div style="border: 1px solid #ccc; padding: 2px;"> <p style="margin: 0;">Vehicle's country of origin</p> <p style="margin: 0;">Belgium ▼</p> </div>	<div style="border: 1px solid #ccc; padding: 2px;"> <p style="margin: 0;">Licence plate number</p> <p style="margin: 0; height: 20px;"></p> </div>
<div style="border: 1px solid #ccc; padding: 2px;"> <p style="margin: 0;">Gross Combination Weight (GCW) [kg] ⓘ</p> <p style="margin: 0;">0</p> </div>	<div style="border: 1px solid #ccc; padding: 2px;"> <p style="margin: 0;">Emission class ⓘ</p> <p style="margin: 0;">Choose One ▼</p> </div>

The **Vehicle Registration Certificate (VRC)** must always be uploaded. Without it, your registration cannot be validated and you are not compliant with Belgian toll regulations.

Austria uses an older version of the VRC. Please follow the instructions related to the correct version of the VRC. A VRC may not always contain the necessary information or proof for the data you have to provide. Without sufficient proof, you may be charged the highest rate or the OBU may be disabled. If the VRC does not provide sufficient details or proof it is important that you consult **other documents** to find this information.

The documents that are accepted for Austria are (apart from the Vehicle Registration Certificate):

- The Certificate of Conformity 9
- The Manufacturer's plate 10
- The EURO Certificate 10

Upload the documents that provide proof of the values entered. **ALL DOCUMENTS** used for information during registration **MUST BE UPLOADED** into the system. Only then Satellic will be able to validate the data you have entered. By uploading the correct documents you avoid paying too much toll.

AN OBU IS REQUIRED IF THE TRACTOR UNIT HAS A GROSS VEHICLE WEIGHT OF OVER 3.5 TONNES OR FOR SEMI-TRAILER TRACTORS OF N1 CATEGORY WITH A BODY CODE BC, REGARDLESS OF THEIR WEIGHT.

1. The data you have to register

1.1 The vehicle's Country of Origin

The vehicle's Country of Origin is the country in which your vehicle is registered. It is also the country that has issued your VRC.

1.2 The License Plate Number

The license plate number (LPN) can be found on every VRC. You need to upload the VRC and the correct LPN to comply with regulations for Belgian toll roads.

1.3 The Gross Combination Weight Rating

The field **GROSS COMBINATION WEIGHT RATING** (GCWR) must state the value of the combination of the vehicle and the trailer. This information can be found in fields F.1, F.2 and O.1 on the VRC. Other countries may provide an F.3 field, stating the Gross Combination Weight on the VRC. This is not the case on the Austrian VRC, so you will have to add F.1 or F.2 and O.1.

There are several factors to consider when looking for the correct weight of your vehicle. If your vehicle **cannot tow** a trailer you cannot simply register the Gross Vehicle Weight (GVW: F.1 or F.2 on the VRC). You must prove that your vehicle cannot tow and that the GVW is the maximum permissible weight of your vehicle, using the accepted documents. If you are unable to do so, you will be charged the highest rate. You can prove that your vehicle cannot tow by:

- a) Indicating that the Gross Trailer Weight (GTW: field O.1 on the VRC) is "0", "N.A.", "---" or something similar.
- b) Indicating that the GCWR in another document is equal to the GVW (F.1) on your VRC.

Please use the overview below to help you define the "Gross Combination Weight Rating" of your vehicle.

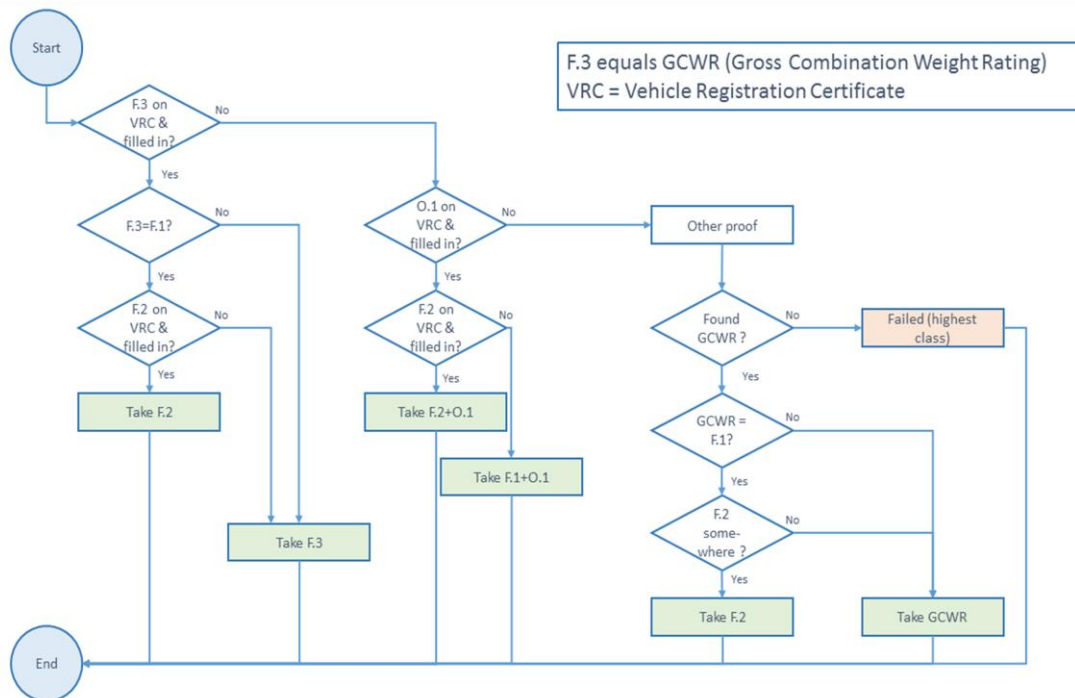


Figure 1: Overview to determine the correct weight to register

An empty GCWR or GTW field is not sufficient as proof that you cannot tow, because these are optional fields. You can leave them empty even if your vehicle can tow.

Keep in mind that if you have an adjusted GVW, this will be indicated in field F.2. In that case you must use F.2 instead of F.1 when referring to your GVW. This does not imply that you can ignore your F.3 weight if you have an F.2 weight.

If your vehicle **can tow**, the GCWR must be provided. This is the combination of the vehicle and the trailer. This value is not on your VRC. However, you can look for the GTW (O.1) and add this weight to the GVW (F.1) or the adjusted GVW (F.2) if this contains another weight.

If you are **unable to find the GTW** (O.1) on your VRC you can find it on other documents (which you must also upload during registration). Your GCWR will be on your Certificate of Conformity (p.9) or Manufacturer's plate (p.10).

1.4 The Emission Class

Emission standards

Vehicle registration papers without Euro class

If the emission class is not specified on the vehicle documents, the tax authority uses the following table. Here you will find the category you should use when registering your vehicle. When you know your truck belongs to a better category, you need to request the truck manufacturer a certificate proving the emission class.

EMISSION STANDARDS FOR VEHICLES OF CATEGORY N1	
[€ / km]	DATE OF THE FIRST REGISTRATION OF THE VEHICLE IN BELGIUM OR ABROAD EMISSION STANDARD
Euro 1	1 October 1994 - 31 December 1997
Euro 2	1 January 1998 - 31 December 2001
Euro 3	1 January 2002 - 31 December 2006
Euro 4	1 January 2007 - 31 December 2011
Euro 5	1 January 2012 - 31 August 2016
Euro 6	1 September 2016 - a date to be set by the minister

FOR VEHICLES OF CATEGORY N2	
DATE OF REGISTRATION OF THE VEHICLE AT HOME OR ABROAD	EMISSION NORM
As of 1 October 1993 until 30 september 1996 included	Euro I
As of 1 October 1996 until 30 september 2001 included	Euro II
As of 1 October 2001 until 30 september 2006 included	Euro III
As of 1 October 2006 until 31 december 2011 included	Euro IV
As of 1 January 2012 until 31 augustus 2016 included	Euro V
As of 1 September 2016	Euro VI

FOR VEHICLES OF CATEGORY N3	
DATE OF REGISTRATION OF THE VEHICLE AT HOME OR ABROAD	EMISSION NORM
As of October 1 1993 until September 30 1996 included	Euro I
As of October 1 1996 until September 30 2001 included	Euro II
As of October 1 2001 until September 30 2006 included	Euro III
As of October 1 2006 until September 30 2009 included	Euro IV
As of October 1 2009 until December 31 2013 included	Euro V
As of January 1 2014	Euro VI

Emission standards

for tractors and off-road vehicles

WHEN PHASES ARE INDICATED ON THE REGISTRATION DOCUMENTS OF THE OFF-ROAD VEHICLE	
PHASES	EMISSION STANDARD
Phase I	Euro I
Phase II	Euro II
Phase IIIA	Euro III
Phase IIIB	Euro V
Phase IV	Euro VI

WHEN PHASES OR TIERS ARE NOT INDICATED ON THE REGISTRATION DOCUMENTS OF THE OFF-ROAD VEHICLE			
DATE OF REGISTRATION OF THE VEHICLE AT HOME OR ABROAD	EMISSION STANDARD	EMISSION STANDARD	EMISSION STANDARD KMH
As of January 1 1999 until December 31 2001 included	Phase I		Euro I
As of January 1 2002 until December 31 2005 included	Phase II		Euro II
As of January 1 2006 until December 31 2010 included	Phase IIIa	Tier 3	Euro III
As of January 1 2011 until December 31 2013 included	Phase IIIb	Tier 4i	Euro V
As of January 1 2014	Phase IV	Tier 4	Euro VI

The emission class is the European emission standard of a vehicle. Those emission classes will be registered as follows: EURO <number>.

In case your emission class is not shown on your vehicle registration certificate, the table above should be consulted to determine your minimum emission class.

For example: If you have a vehicle which was first registered on 27 September 1989, choose "EURO 0". If you have a vehicle which was first registered on June 28, 1999, select 'EURO II'.

In case your vehicle has a different emission class than shown in the table, one of the following documents should be sent along with your vehicle registration certificate:

- A ♦ The Registration Certificate or
- B ♦ Certificate of Conformity or
- C ♦ EURO Certificate

2. Finding Data

Most data can be found on the **VRC**:

- The **Country**
- The **LPN**
- The **GCWR**
Otherwise you can find the GCWR on:
 - The Certificate of Conformity
 - The Manufacturer's plate
- The **Emission Class**
Otherwise you can find the Emission Class on:
 - The Certificate of Conformity
 - The EURO Certificate

3. Detailed breakdown of the accepted documents

The following pages give a detailed description of the documents that Satellic accepts as proof. Please check your documents and use the description below to find the necessary information. (Please keep in mind that not all of these documents must be provided, only the VRC and other documents that prove the values you provide are mandatory).

- 3.1 Current version of the Vehicle Registration Certificate (from 2011) 6
- 3.2 How to find the required data on the VRC 7
 - ✓ **Licence plate number** 7
 - ✓ **Weight** 7
 - ✓ **Emission Class** 8
- 3.3 Certificate of Conformity 9
- 3.4 Manufacturer's plate 10
- 3.5 EURO Certificate 10
- 3.6 Older versions of the VRC 11

Please make sure to **UPLOAD** a scanned copy or photo of **EVERY DOCUMENT** you have used to register the mandatory data. Without them, your registration will not be approved.

Note that the **VRC** is **ALWAYS REQUIRED!**

If you provide **INSUFFICIENT** proof to Satellic, you will be charged the highest rate until all proof is presented.

3.1 Current version of the Vehicle Registration Certificate (from 2011)

Your registration certificate should look like this:



If your vehicle was registered before 2011, it will look like the Older versions of the VRC (p.11). In both cases, follow the steps shown under 3.2 to determine your licence plate number, weight and emission class.

3.2 How to find the required data on the VRC


✓ Licence plate number

Your licence plate number (LPN) is on the front of your document, next to A.



✓ Weight

- **STEP 1.** Look for field O1 (GTW) on the back of your document.

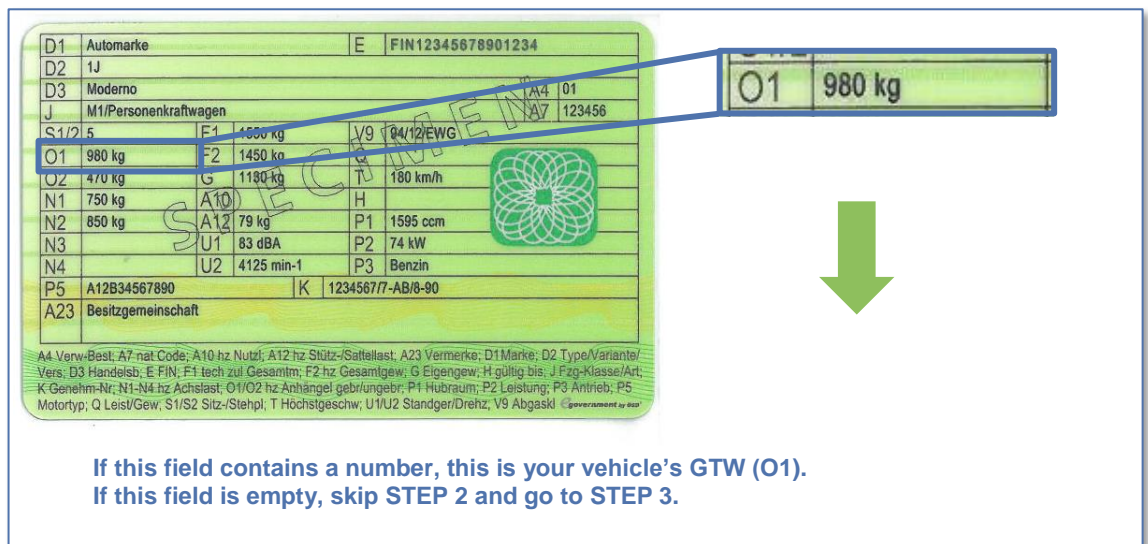


D1	Automarke	E	FIN12345678901234
D2	1J		
D3	Moderno		
J	M1/Personenkraftwagen		
S1/2	5	F1	1450 kg
O1	980 kg	F2	1450 kg
O2	470 kg	G	1190 kg
N1	750 kg	A10	
N2	850 kg	A12	79 kg
N3		U1	83 dBA
N4		U2	4125 min-1
P5	A12B34567890	K	12345677-AB/8-90
A23	Besitzgemeinschaft		

A4 Verw-Best; A7 nat. Code; A10 hz Nutz; A12 hz Stütz-/Sattelast; A23 Vermerke; D1 Marke; D2 Type/Variante/
Vers; D3 Handelsb.; E FIN; F1 tech zul Gesamt; F2 hz Gesamtgew; G Eigengew; H gültig bis; J Fzg-Klasse/Art;
K Genehm-Nr; N1-N4 hz Achslast; O1/O2 hz Anhänger gebir/ungebr; P1 Hubraum; P2 Leistung; P3 Antrieb; P5
Motortyp; Q Leis/Gew; S1/S2 Sitz-/Stehpl; T Höchstgeschw; U1/U2 Standger/Drehz; V9 Abgaskl

**If this field contains a number, this is your vehicle's GTW (O1).
If this field is empty, skip STEP 2 and go to STEP 3.**

- **STEP 2.** Add the GTW (O1) to the GVW. Go to the back of your document and look for the boxes F1 and F2.

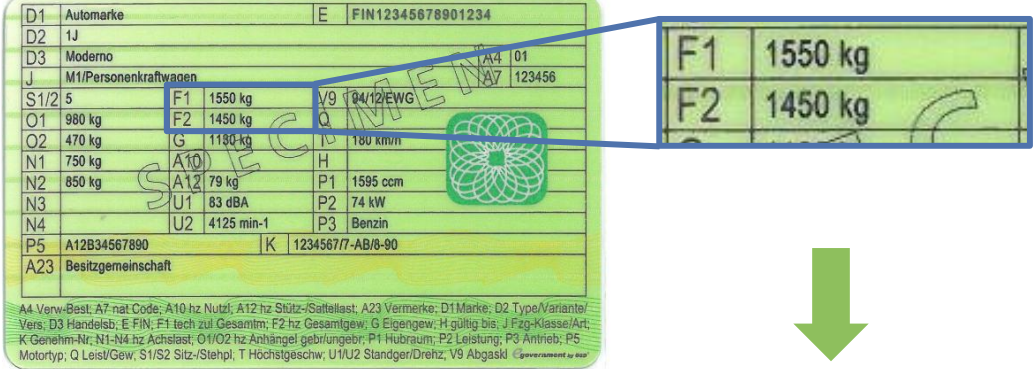

Is field F2 filled out?

Yes → Add this to the weight you found in STEP 1.
 No → Add the weight next to F1 to the weight you found in STEP 1.


The sum of F1 or F2 and the GTW (O1) is the weight you must register.

- **STEP 3.** If the boxes F1, F2 or O1 on the back of your document are empty, you will need additional documents to prove your vehicle’s weight. See [Certificate of Conformity](#) (p.9) or [Manufacturer’s plate](#) (p.10).

If you find the GCWR on one of these documents, do not forget to **CHECK THE GCWR AGAINST THE GVW**. If your GCWR equals your GVW and if you have an F2 weight, then use this F2 weight as your registered weight.

✓ **Emission Class**

- **STEP 1.** Look for field V.9 on the back of your VRC.
- **STEP 2.** If you weren’t able to find your Emission Class in STEP 1, you need additional documents to prove your Emission Class. See [Certificate of Conformity](#) (p.9) or [EURO Certificate](#) (p.10).

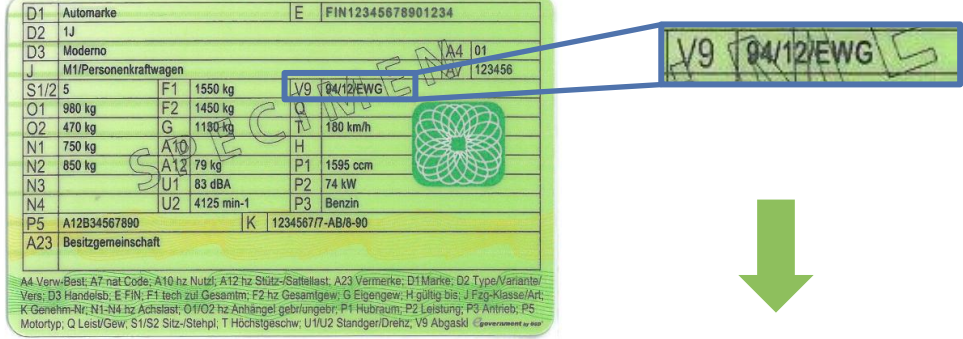

If you see “Euro” followed by a number, you must enter this Euro code as your Emission Class.

If you find a different value here, check the [4.1 Emission Class conversion](#) table (p.12).


If your registration certificate is the **MOST RECENT** one, it is likely that after these steps you will have found all the necessary data (Country, LPN, GCWR and Emission Class). In that case you can return to your registration.

If your certificate is an **OLDER VERSION**, check the Older versions of the VRC (p.11), where you will find images of all older versions with instructions (if any) on how to go through the steps described above.

If you have **NOT FOUND** all of the data needed during registration, please consult the [Certificate of Conformity](#) [p.9], [Manufacturer's plate](#) [p.10] and [EURO Certificate](#) [p.10].

3.3 Certificate of Conformity

The Certificate of Conformity is issued by your vehicle manufacturer. It will be similar to the one below:

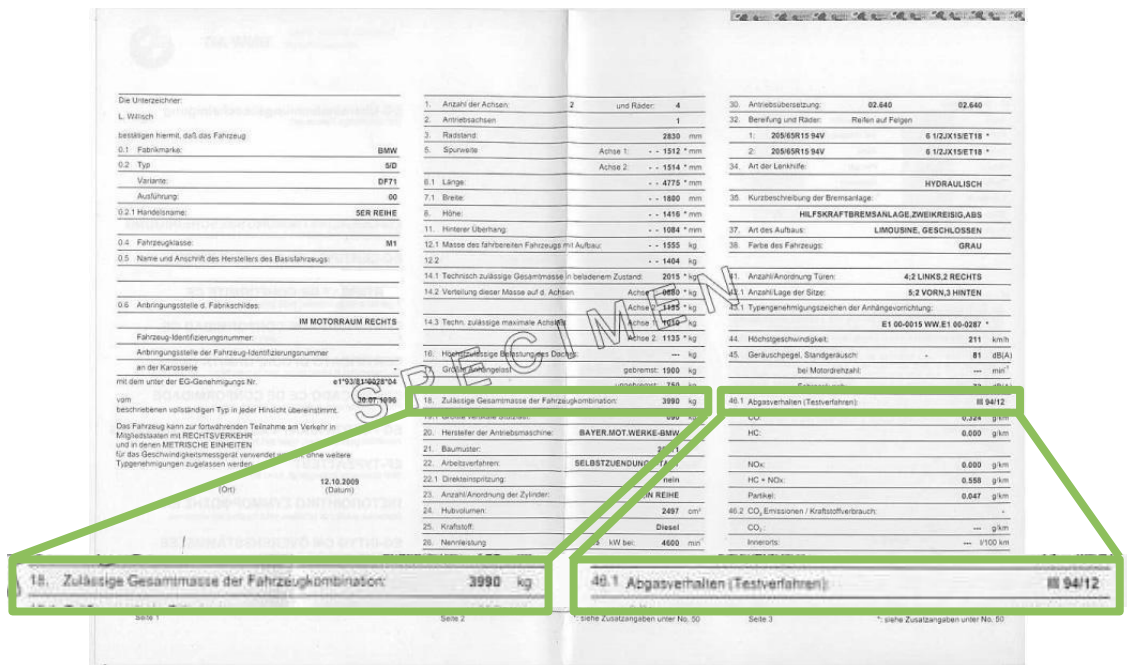

The document contains the following fields:


	Issued before or in 2009	Issued in or after 2009
GCWR	Field 18	Field 17.4
Emission Class	Field 46.1*	Field 47

*This field contains a code. Check the 4.1 Emission Class conversion table (p. 12) to find the corresponding Emission Class for this code.

CHECK THE GCWR AGAINST THE GVW as described after **STEP 3** of finding the **Weight** (p.8)!

3.4 Manufacturer's plate

The manufacturer's plate or VIN plate is a metal plate attached to the framework of your vehicle. It mentions the VIN number of the vehicle, but also the weight values of the vehicle. This plate is made by your vehicle manufacturer. It should be similar to the one below:

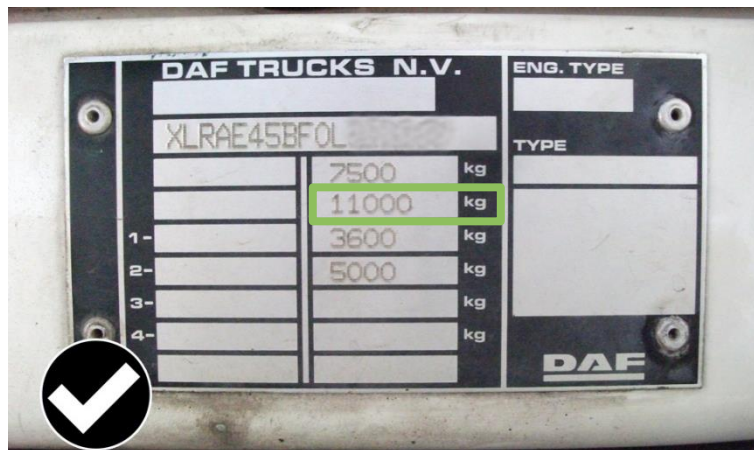


This plate should have the same format throughout Europe. It usually features two columns with weights. The left column represents the national weights, the right column represents the technical weights. You should always register the higher value (in most cases it will be the value in the column on the right). The second row is the value right above the axle weights and always contains the GCWR.

CHECK THE GCWR AGAINST THE GVW. If your GCW equals your GVW and if you have an F2 weight, then use this F2 weight as your registered weight.

3.5 EURO Certificate

The EURO Certificate is a certificate stating your vehicle's Emission Class. It is mandatory for ECMT (or CEMT) transport. Its language may vary but it always looks like this:

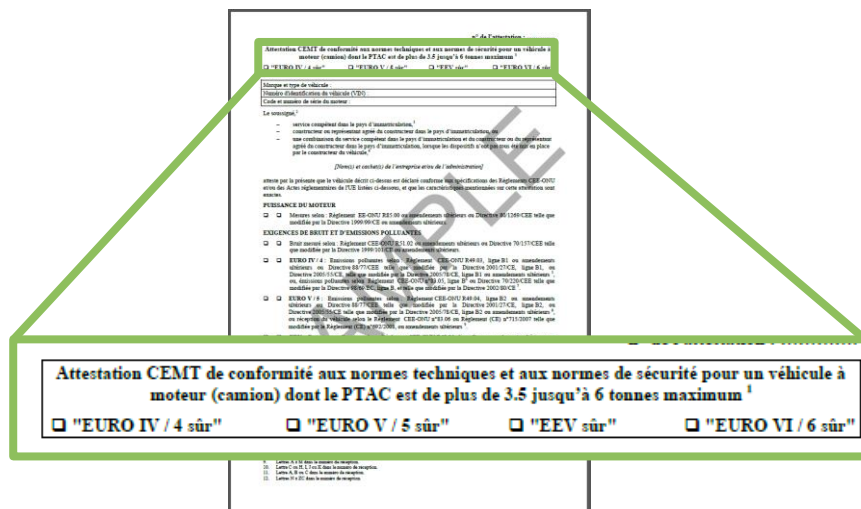

The field at the top of the page shows your vehicle's Emission Class (the relevant field is ticked).

3.6 Older versions of the VRC

✓ Older version 1 (before 2011)

FRONT

A1 Zulassungsstelle	9000701 Generali BU Zentrum		
A2 DVR Nr.	000803580		
A Kennzeichen	W-321AB		
I Zugelassen am:	28.06.2011	H gültig bis:	
C1.1 Nachname	Mag. Österreicher		
C1.2 Vorname / A3 Geb.datum	Johannes		/ 01.11.1956
C1.3 Anschrift	Maroltingergasse 65/12 1160 Wien		
C4 Antragsteller ist:	Leasingnehmer, dies ist kein Eigentumsnachweis		
A4 Verwendungsbestimmung	01		
E FIN	WAUZZZ8K2AN024387		
B Erstmalsige Zulassung am:	08.11.2009	A6 Genehmigungsdatum	27.07.2009
A5 Genehmigungsgrundlage	EG-Betriebslaubnis		
K Genehmigungsnummer	e1*2001/116*0430*13		
A7 Nationaler Code	168772		
J Klasse / Fahrzeugart	M1/Personenkraftwagen		
D1 Marke	AUDI		
D3 Handelsbezeichnung	AUDI A4		
D2 Type/Variante/Version	B8/LCAGCF1/FM6B100SR8K607MGEM1		
A8 Aufbau	Limousine		
R Farbe	Grau	A16 Beg.Plakette	weiß
G Eigengewicht	1470 kg	S1/S2 Sitz-/Stehplätze	5/-
F1 Techn. zul. Gesamtmasse	2020 kg	N höchste zulässige Achslasten	1 1080 kg 2 1065 kg 3 4
F2 Gesamtgewicht	2020 kg		
A10 Nutziast			
A12 Stütz-/Sattellast	80/- kg		
O1 Anhängelast gebr.	1300 kg	O2 ungebremst	750 kg
P5 Motortype	CAG		
P3 Antriebsart	Diesel		
T Höchstgeschw.	205 km/h	P1 Hubraum	1968 ccm
P2 Leistung	88 kW	P4 bei Drehzahl	4000 min-1
Q Leistung/Gewicht		U3 Fahrgeräusch	72 dBA
U1 Standgeräusch	72 dBA	U2 bei Drehzahl	2500 min-1
V9 Abgasverhalten nach / Stufe	692/2008A		
V1 CO	0,2177	V3 NOx	0,1527
V2 HC		V4 HC+NOx	0,1769
V6 Korr. Absorptionskoeff.	0,5	V5 Partikel	0,001
V8 Kraftstoffverbrauch gesamt	4,9 l/100 km	V7 CO ₂	129 g/km
A23 Vermerke			
A13 Räder, Bereifung / A17 Auflagen / A18 Behördliche Eintragungen / A19 Anmerkungen / A20 Anlage 205/60 R16 92W 7Jx16 ET39 205/60 R16 92W 7Jx16 ET39 Leasingfahrzeug ##No F2: mit Anhaenger: +70 kg##No N2: mit Anhaenger Achse 2: +80 kg##No A13: 225/50 R17 94Y#7,5Jx17 ET45,##225/50 R17 94H M+S#7Jx17 ET46,##225/55 R16 95Y#7,5Jx16 ET45,##225/55 R16 95H M+S#7Jx16 ET46,##245/40 R18 93Y#8Jx18 ET47,##245/45 R17 95Y#8Jx17ET47,## #No 46.1: CO 217,7 mg/km,##NOX 152,7 mg/km,##THCPLUSNOX 176,9 mg/km,##PARTIKEL 1,00 mg/km,##			

BACK

The LPN (A), the GWW (F.1 and F.2), the GTW (O.1) and Emission Class (V.9) are all mentioned on the document, as on the most recent version of the VRC (as described in 3.1).
To find the GCW (F.3) follow the same steps as described above.

4. Appendices

4.1 Emission Class conversion table

The Emission Class should be registered in the following format: EURO <number>. The reference to the Emission Class, which is stated on your documents, may, however, be formulated in a different way.

1. The Emission Class code will often have the following format:

88/77/EEC*2001/27A EC
2001/27A EC

When two codes are mentioned, they are usually separated by an asterisk (*). You can find the first code in the left column of the table below (e.g. 88/77, as in the example above). The letters in this code can be ignored (e.g. EEC, as in the example above). These letters are merely a reference to the European Economic Community/European Commission. The row that contains the first code (e.g. 88/77), also contains the second code that follows the asterisk (2001/27A EC, as in the example above). It is also possible that the code before the asterisk is not mentioned. In that case, you will only find the second code that follows the asterisk. The codes are sorted by year, followed by ascending numbers. When the year/number is followed by a letter, that letter is important to note, as it may determine your vehicle's Emission Class. The symbol "ø" indicates that the code is not followed by a letter. In the table below, the code 2001/100 ø, A indicates two codes: 2001/100 ø (code only) and 2001/100 A (code + letter A). Sometimes, it is the fuel type of your vehicle ("diesel", "benzin", as in the table below), which will determine your Emission Class.

2. In some cases, the Emission Class code may be stated in a totally different way, without a year/number or a number/year:

UN-ECE R49.05A
49-R-05A

In those cases, your code will contain a single letter R, which is preceded or followed by the number "15", "24", "49", or "83" (e.g. "R49" and "49-R", as in the two examples above). That is your primary code. The secondary code starts with a zero (0) and is often followed by a letter (e.g. 05A, as in the example above). Once you have found your primary R-code on your documents, you will find the corresponding secondary code in the corresponding row "R15", "R24", "R49", or "R83" in the table below. The header of the column, which contains your secondary "0-code" indicates your Emission Class in the standardized "EURO <number>" format (e.g. EURO 3, as in the example above). All examples above are for Emission Class EURO 3.

IMPORTANT:

Austria, Denmark, Germany, Hungary, Italy, Norway, Sweden and Switzerland often use non-standard, local codes. These codes are not included in the table below. They may be a single-digit number, e.g. "3", which should not be interpreted as "Euro 3".

Emission Class conversion table¹

	Euro 0	Euro 1	Euro 2	Euro 3	Euro 4	Euro 5	EEV (=Euro 5)	Euro 6	N.a. (=Euro 6)
Euro	00,0	01,1,I	02,2,II	03,3,III	04,4,IV	05,5,V,5a,5b,5c		06,6,VI,6a,6b,6c	
R15	(...)								
R24	(...)								
R49	00 (...) 01 φ,A,(...)	02 φ,A	02 B	03 φ,A 04 φ,A 05 φ,A	03 B,B1,C 04 B,B1,C 05 B,B1,C	03 B2,D,E,F,G 04 B2,D,E,F,G 05 B2,D,E,F,G	03 C(-EEV) 04 C(-EEV) 05 C(-EEV),H,I,J,K	06 (...) (...) IV	
R83	00 (...) 01 (...) 02 φ,A 03 φ,A 04 φ,A	02 B,C (diesel) 03 B,C (diesel)	01 B (petrol) 02 B (petrol) 03 B (petrol) 04 B,C	(...) I.A 05 φ,A,I (diesel)	(...) II.B,B1,C 03 III 04 III 05 B,II (petrol)	(...) III.B2,D,E,F,G 05 J,K,L,M 06 (...) (...) III	(...) C(-EEV).H,I,J,K	07 (...) (...) IV	
70/220	70/220 (...) 74/290 77/102 78/665 83/351 88/76 88/436 89/458 89/491	91/441 φ,A,B 93/59 φ,I,II,III	94/12 96/44 96/69 φ,I,II,III 98/77	98/69 φ,A I,A II,A III 98/77 A (19)99/102 φ,A 2001/1 φ,A 2001/100 φ,A 2002/80 φ,A 2003/76 φ,A 2006/96 φ,A (...) A	98/69 B,B I,B II,B III 98/77 B (19)99/102 B 2001/1 B 2001/100 B 2002/80 B 2003/76 B 2006/96 B (...) B	2006/96 B2,D,E,F,G	2006/96 H,I,J,K		
88/77	88/77 (...)	91/542 φ,A 96/1 φ,A	91/542 B 96/1 B	(19)99/96 φ,A 2001/27 φ,A (...) A 2005/55 φ,A 2005/78 φ,A 2006/51 φ,A 2006/81 φ,A 2008/74 φ,A (...) A	(19)99/96 B,B1,C 2001/27 B,B1,C (...) B,B1,C 2005/55 B,B1,C 2005/78 B,B1,C 2006/51 B,B1,C 2006/81 B,B1,C 2008/74 B,B1,C (...) B,B1,C	(19)99/96 B2,D,E,F,G 2001/27 B2,D,E,F,G (...) B2,D,E,F,G 2005/55 B2,D,E,F,G 2005/78 B2,D,E,F,G 2006/51 B2,D,E,F,G 2006/81 B2,D,E,F,G 2008/74 B2,D,E,F,G (...) B2,D,E,F,G	(19)99/96 C(-EEV) 2001/27 C(-EEV) (...) C(-EEV) 2005/55 C(-EEV),H,I,J,K 2005/78 C(-EEV),H,I,J,K 2006/51 C(-EEV),H,I,J,K 2006/81 C(-EEV),H,I,J,K 2008/74 C(-EEV),H,I,J,K (...) C(-EEV),H,I,J,K		
2005/55	<p>Notes Noten Remarques Aufzeichnungen:</p> <p>(¹) Mentioned on the vehicle registration certificate at V.9 (or equivalent) or on the Euro certificate Vermeld op het kentekenbewijs bij V.9 (of equivalent) of op het Euro-certificaat Mentionné sur le certificat d'immatriculation sous V.9 (ou équivalent) ou sur le certificat Euro Anzeigt auf Ihrem Fahrzeugschein bei V.9 (oder gleichwertig) oder auf dem Euro-Zertifikat</p> <p>(²) Light goods vehicles Lichte vrachtwagens Véhicules légers Leichte Nutzfahrzeuge</p> <p>(³) Heavy goods vehicles Vrachtwagens Véhicules lourds Schwerlastfahrzeug</p> <p>(⁴) Effective date (sale/registration) to effective date of a new standard (type approval) Inwerkingtreding (verkoop/registratie) tot inwerkingtreding van een nieuwe standaard (typegoedkeuring) Entrée en vigueur (vente/enregistrement) jusqu'à l'entrée en vigueur d'une nouvelle norme (approbation type) Inkrafttreten (Verkauf/Anmeldung) bis Inkrafttreten einer neuen Norm (Typgenehmigung).</p>								
715/2007	<p>(¹) 692/2008 A,B,C,D,E,F,G,H,I,J,K,L,M 566/2011 A,B,C,D,E,F,G,H,I,J,K,L,M 459/2012 F,G,H,I,J,K,L,M 630/2012 F,G,H,I,J,K,L,M 143/2013 F,G,H,I,J,K,L,M 171/2013 F,G,H,I,J,K,L,M 195/2013 F,G,H,I,J,K,L,M 133/2014 J,K,L,M 136/2014 J,K,L,M (...) A,B,C,D,E,F,G,H,I,J,K,L,M</p> <p>(²) 692/2008 N,O,P,Q,R,S,T,U,V,W,X,Y 566/2011 N,O,P,Q,R,S,T,U,V,W,X,Y 459/2012 N,O,P,Q,R,S,T,U,V,W,X,Y,ZA,ZB,ZC 630/2012 N,O,P,Q,R,S,T,U,V,W,X,Y,ZA,ZB,ZC 143/2013 Q,R,S,T,U,V,W,X,Y,ZA,ZB,ZC 171/2013 Q,R,S,T,U,V,W,X,Y,ZA,ZB,ZC 195/2013 Q,R,S,T,U,V,W,X,Y,ZA,ZB,ZC 133/2014 T,U,V,W,X,Y,ZA,ZB,ZC 136/2014 T,U,V,W,X,Y,ZA,ZB,ZC,ZD,ZE,ZF 582/2011 (...) (...) N,O,P,Q,R,S,T,U,V,W,X,Y,ZA,ZB,ZC</p>								
595/2009	<p>64/2012 A,B,C 133/2014 A,B,C 136/2014 A,B,C (...) A,B,C</p>								